

AC adaptor and cables

AC adaptor




GE18 05-P1J
 GE18 09-P1J
 GE18 12-P1J
 Sockets: EU, UK, AU ,US

Cable for PC connection



USB: TypeA-MicroB

Signal output cables

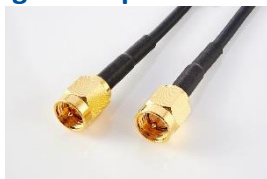

SMA-SMA



SMA-BNC



BNC-BNC



MMCX-SMA



MMCX-BNC

Power supply and TEC control cables



LEMO-DB9



AMP2x4-DB9



AMP2x4-DUBOX2x5



LEMO-DUBOX2x5

Power supply cables



KK2-POWER



JWPF-DB9